


Power Outlet for 12V

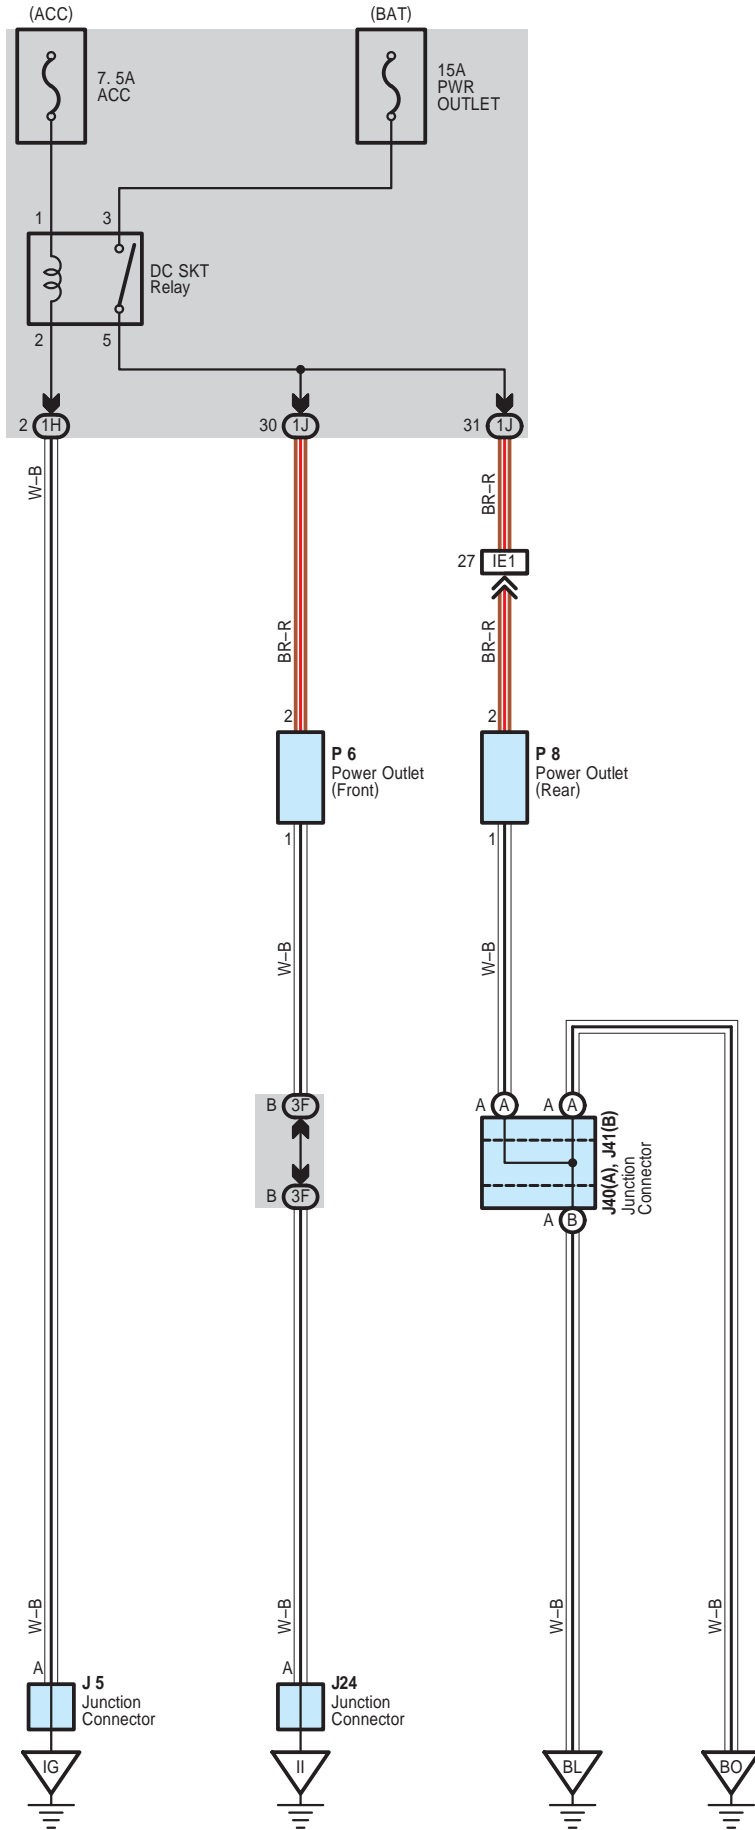

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J5	38	J40	A 40	P6	39
J24	38	J41	B 40	P8	41

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
3F	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
IG	46	Left Kick Panel
II	46	Instrument Panel Brace RH
BL	48	Floor Seat Crossmember LH
BO	48	Rear Pillar LH