



# DRIVE BELT COMPONENTS

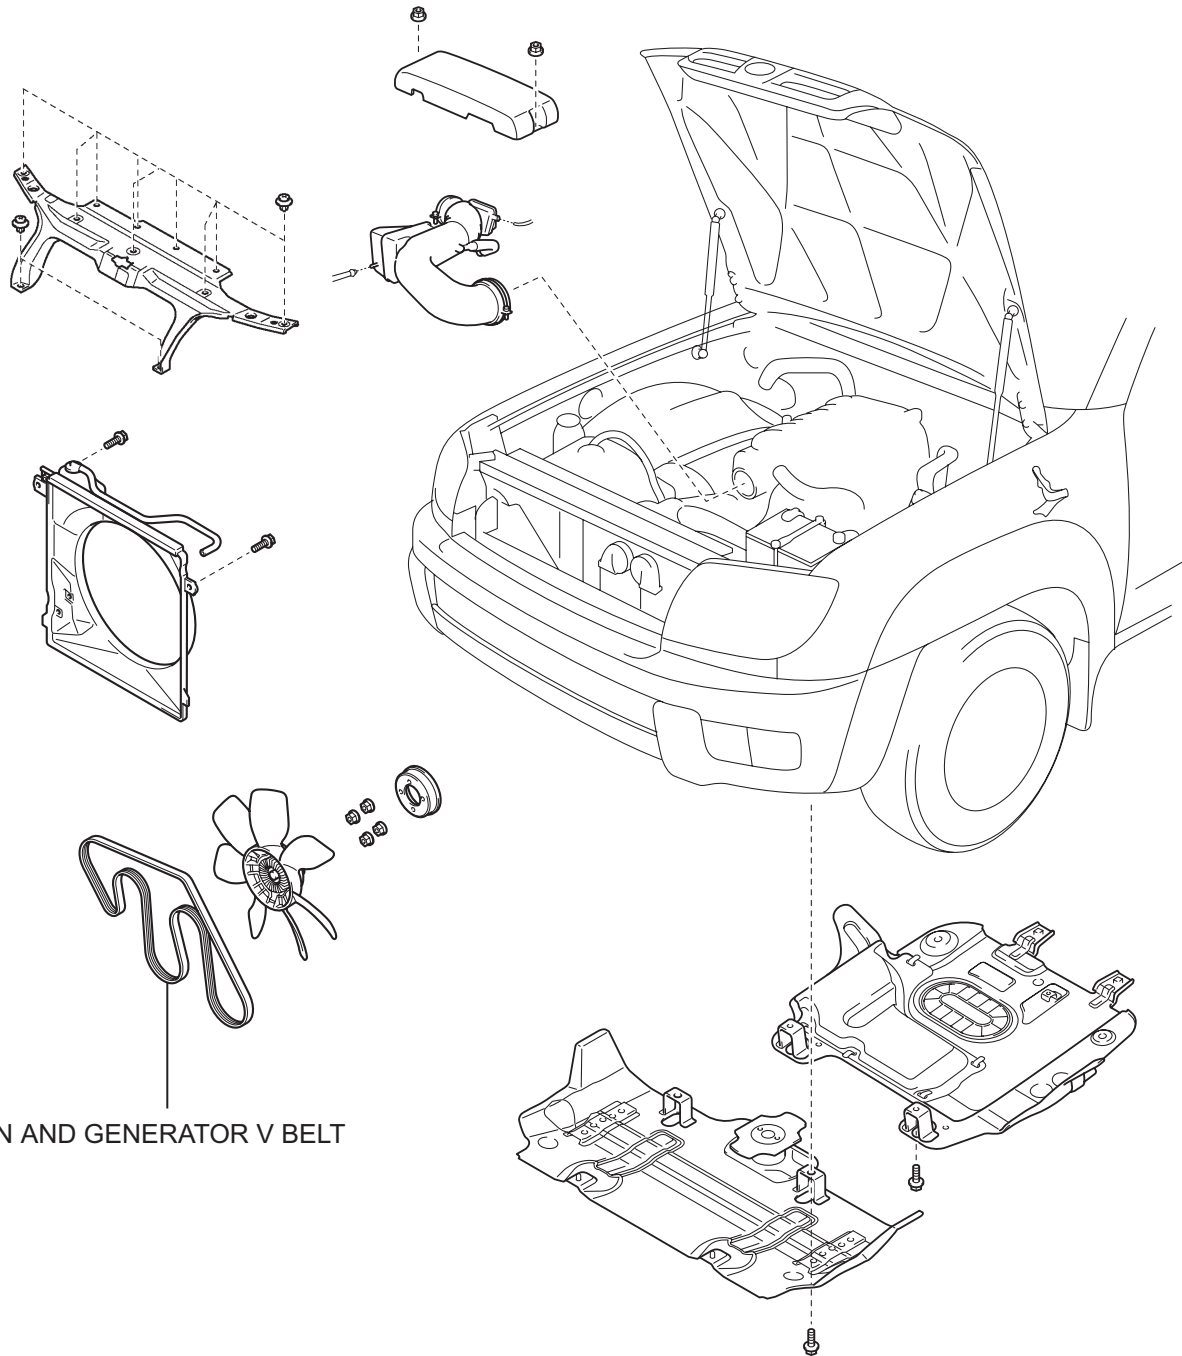

FAN AND GENERATOR V BELT

EM

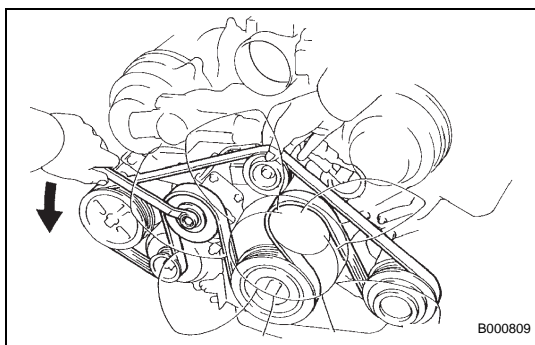

## REMOVAL

### 1. REMOVE FAN AND GENERATOR V BELT

- (a) Loosen the belt tension by turning the belt tensioner counterclockwise, and then remove the fan and generator V belt.

HINT:

The pulley bolt for the belt tensioner has left-hand thread.