


## INSPECTION

### 1. INSPECT V-RIBBED BELT TENSIONER ASSEMBLY

- (a) Remove the V belt from the tensioner pulley. Then check that nothing gets caught the tensioner by turning it clockwise and counterclockwise.
- (b) When a malfunction exists, replace the tensioner.

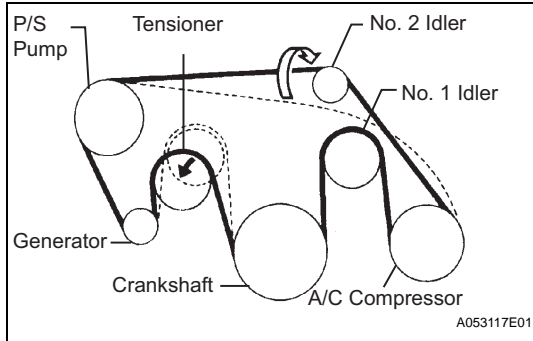

## INSTALLATION

### 1. INSTALL FAN AND GENERATOR V BELT

- (a) Set the V belt onto every parts except the No. 2 idler pulley, as shown in the illustration.
  - (b) Loosen the V belt by turning the belt tensioner counterclockwise.
  - (c) Set the V belt to the No. 2 idler pulley.
- (d) After installing a new belt, check that the mark is within the B range as shown in the illustration.

