



Tire Pressure Warning System

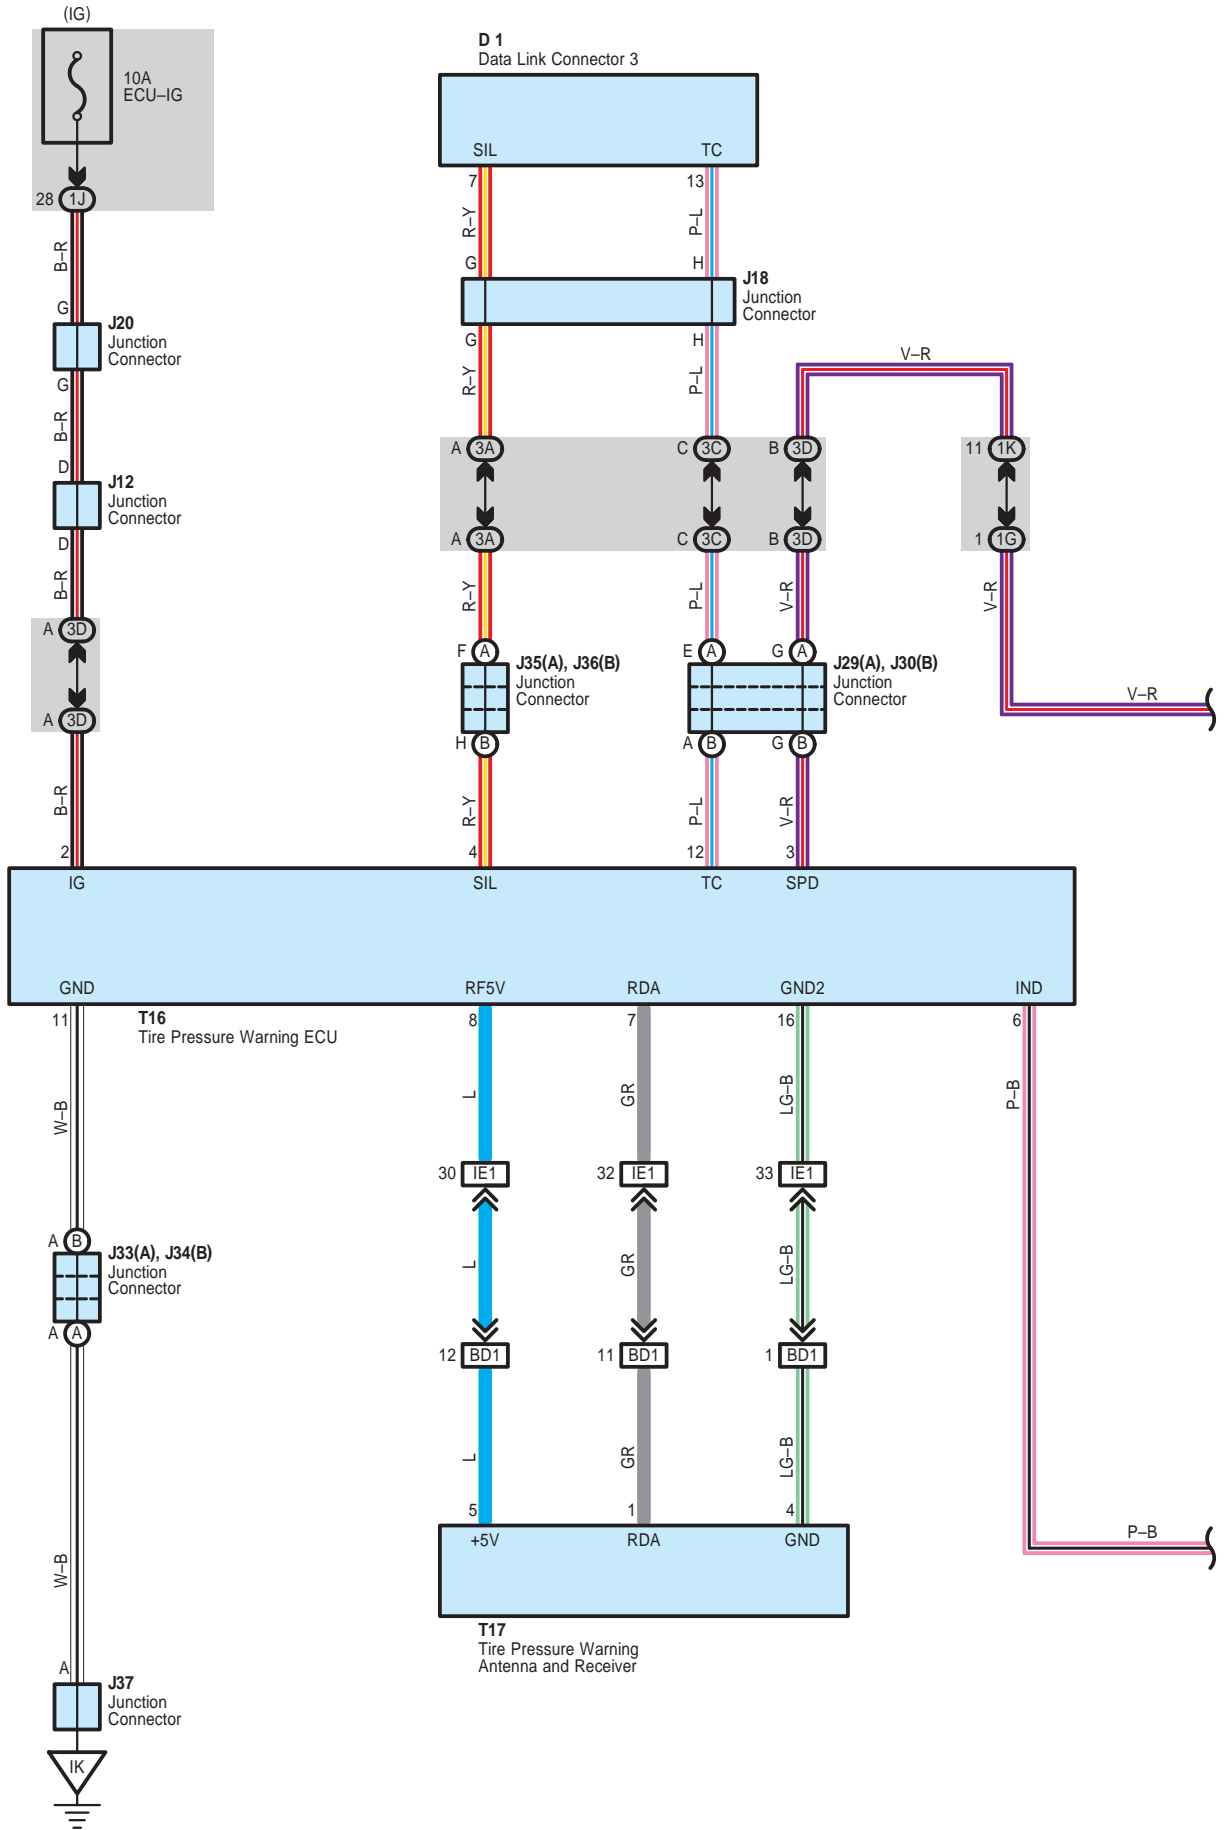

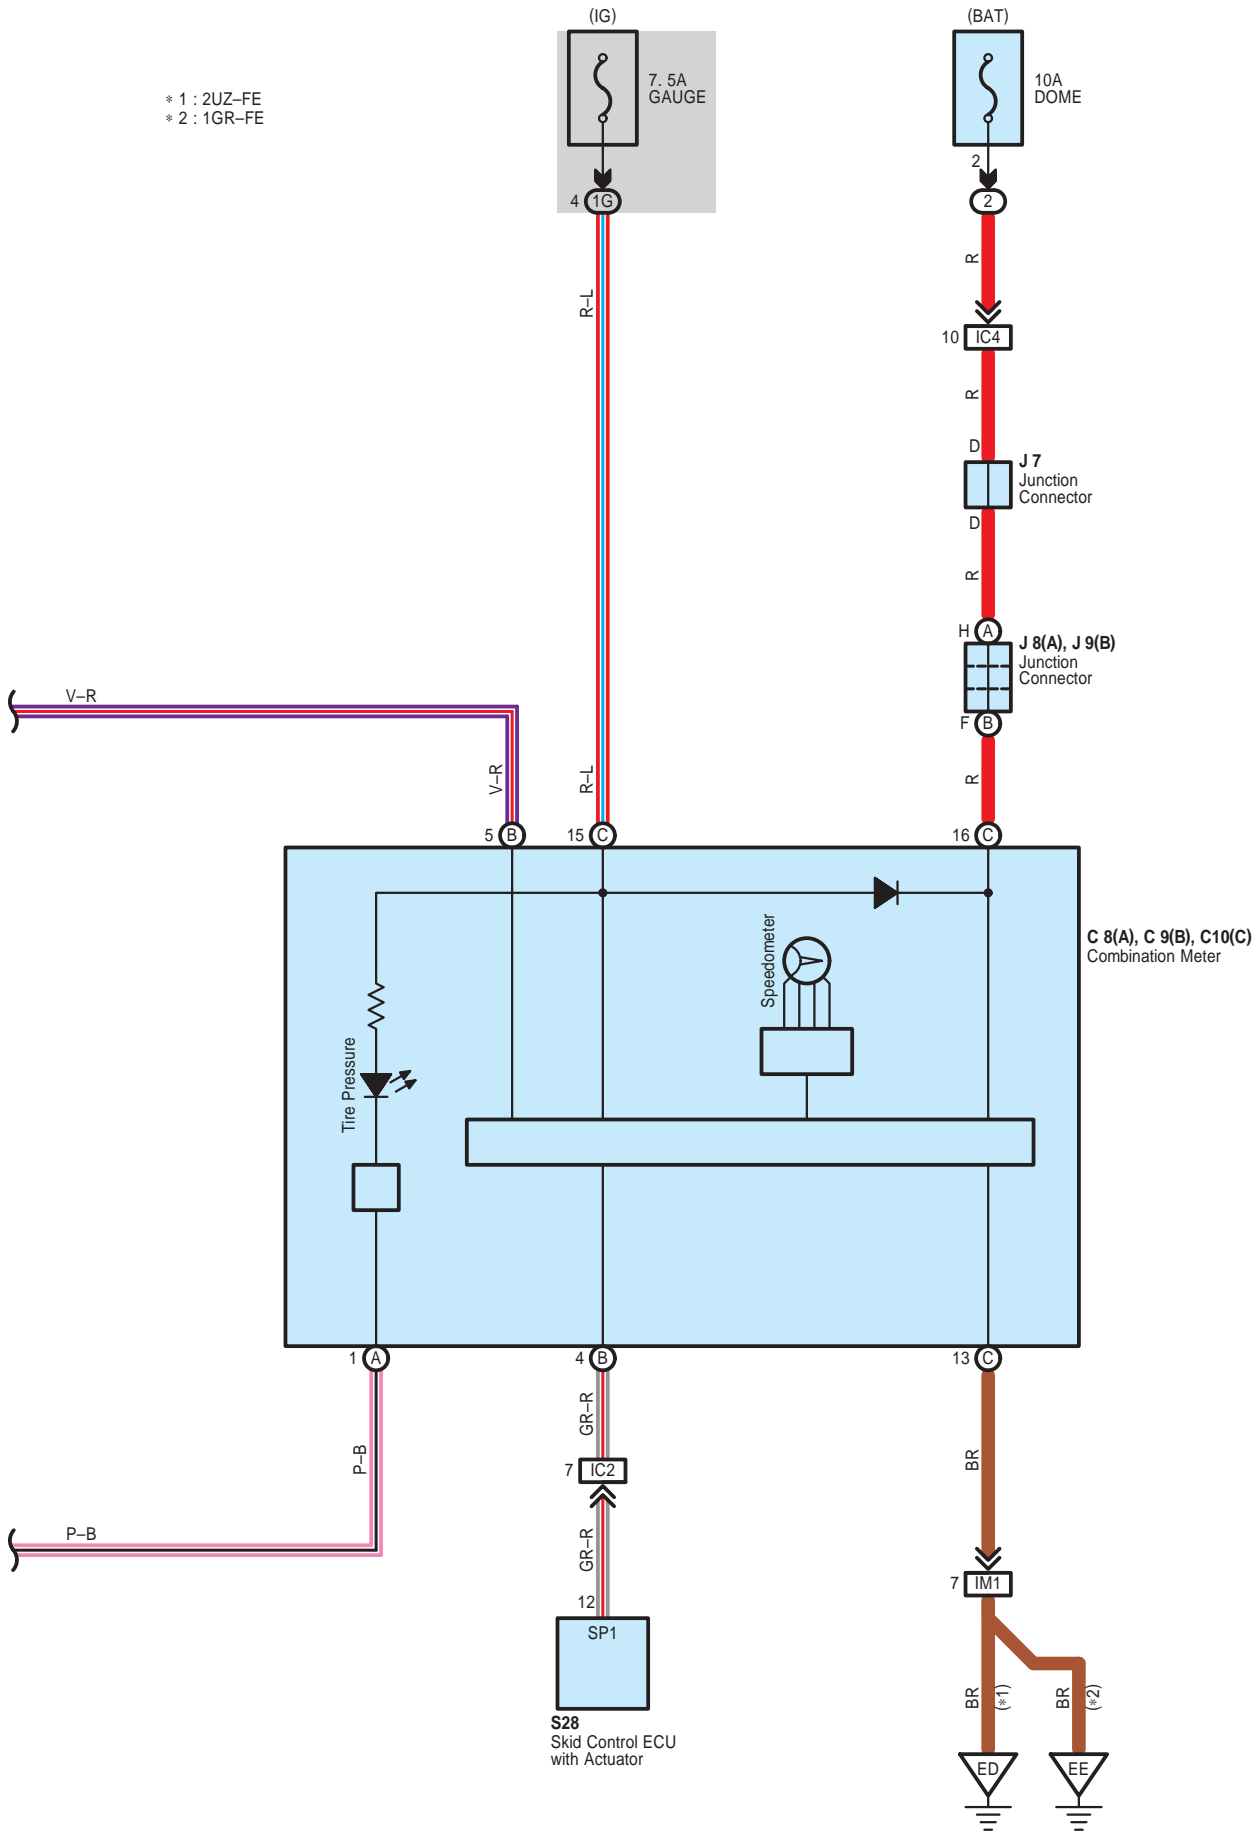

4RUNNER (EM03M0U)

Tire Pressure Warning System

System Outline

The air pressure sensor installed in the tire wheel detects the tire air pressure and transmits signals to the vehicle side receiver. When the detected tire air pressure is below a specified level, the warning light in the combination meter comes on to inform the driver.

Warnings when the tire pressure is low

* When the tire air pressure is below a specified level, the warning light in the combination meter comes on.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
C8	A	37	J12	38	J35	A	38	
C9	B	37	J18	38	J36	B	38	
C10	C	37	J20	38	J37		38	
D1		37	J29	A	38	S28	33 (2UZ-FE)	
J7		38	J30	B	38		35 (1GR-FE)	
J8	A	38	J33	A	38	T16	39	
J9	B	38	J34	B	38	T17	41	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
3A	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3C		
3D		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BD1	48	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block
IK	46	Right Kick Panel

